

BAN the BOG!



▶ FROM THIS

▶ TO THIS

One year with no maintenance

- ◆ Reduces lameness
- ◆ Promotes cow flow
- ◆ Ultra low maintenance
- ◆ Fast, easy installation

SurePave[®]
The heavyweight in paving

0800 787 383 ◆ www.suretech.co.nz

Good races lead to happy cows and happy farmers

SurePave is a New Zealand designed and manufactured paving system that offers a cost effective, long term solution to the ongoing problems at the high pressure areas on farms.

SurePave keeps its shape, promotes cow flow, and reduces lameness and muck buildup.

INSTALL SUREPAVE:

- at the entry or exit to yards
- at underpass approaches
- around troughs
- on standoff areas
- or any other high pressure area that has been costing you in maintenance, lameness, loss of production and general inefficiencies



The SurePave solution

- Designed for dairy races
- Very strong - tested to withstand up to 700 tonnes per square metre
- Made in NZ from 100% recycled materials
- Big panel size - super efficient to lay and has minimal joins
- Unique, positive interlocking system
- Panels nest together for easy transportation and storage
- Experienced team who are willing to help
- Readily available - we endeavour to hold sufficient stock at all times

Why SurePave?

- Keeps the shape of the race - minimal maintenance
- Stops race breaking down - no more pot holes
- Reduces lameness - helps to trap stones before they reach the concrete
- Promotes cow flow - the cows love it
- Very quick and easy to install - you can install it yourself
- Long lasting solution that increases the overall efficiencies of the entire dairy farming operation

Other farm applications:

- Central pivot irrigator wheel tracks
- Tanker tracks
- Driveways
- Around troughs


We put SurePave down 12 months ago and would 100% recommend it to anyone. Especially good for the 20 - 25 metres before cows enter the cowshed. Our lame cow numbers have dropped dramatically and we have noticed in particular that we now have very few small stones carried into the yard.

Cow flow once the herd hits the pavers is amazing. We used sand off our property which requires topping up now and that will have been our only maintenance requirement. Happy to give our guarantee regarding this product, should any-one wish to contact us.


Satisfied Dairy Farmer, Manawatu

I've tried everything there is in the world to keep my races maintained and SurePave is the best solution as far as I can work out - the surface is perfect after a year


Dairy Farmer, Rotorua

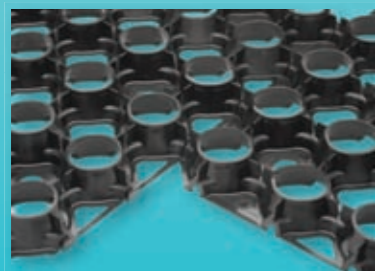

Positive Interlocking design ensure panels are held securely in place

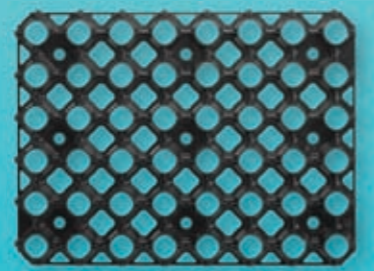

Each panel is 816 x 612mm - only 2 panels are required to cover 1 square metre

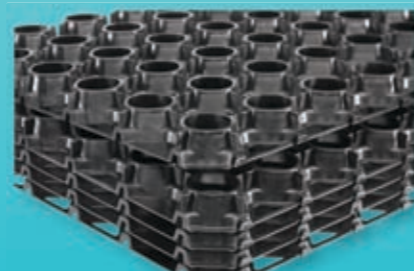

SurePave panels nest together saving on transport and storage



SurePave laid in only 1.5 hours



12 months later

Fast, easy installation

DIY INSTALLATION GUIDE

Preparation & installation

As with anything, the effort and care that goes into preparation always pays off. It is no different when installing SurePave.

- 1 Ensure that there is adequate cross fall/runoff for surface water to be able to move off the race as quickly as possible.
- 2 Shape the area to provide a consistent, solid base. Make sure there are no soft spots. If the area needs building up to achieve adequate falls, a good base metal should be used i.e... rotten rock, roading metal or similar.
- 3 Compact the area well and spread a thin layer of fines i.e.(10—15mm sand, crusher dust, crushed lime, pumice or similar) to create a tidy, consistent bedding surface to lay SurePave panels onto.
- 4 Lay SurePave panels ensuring they interlock together correctly working in rows from left to right.
- 5 Fill SurePave with a fine material i.e. crusher dust, crushed lime fines, pumice, coal fines, some sands, or whatever is available to you in your area. Ideally we are trying to eliminate the introduction of any type of stone that can cause potential damage to the cows.
- 6 Over fill the SurePave panels by 20—30mm and compact in with a vibrating roller, tracked excavator or plate compactor.
- 7 Your improved area is now ready for immediate use.

Maintenance

SurePave requires only minimal maintenance.

MUCK BUILD UP

If laid with adequate cross falls the rain is generally enough to take care of excess muck buildup. However, if a build up does occur SurePave can be scraped off with a rubberised scraper or the back, rounded side of a grader blade.

RE-TOPPING SUREPAVE

Sometimes, depending on the situation and/or material used to fill SurePave, the tops of the panels can become exposed. This is not a major issue and it can be easily rectified. You can either just top it with a fresh skim of the same filling material and consolidate it in or wait until the surface is dry and run a rotary broom over the area to get rid of the muck that may have filled the cells and then re-top with the same filling material.

DAMAGED PAVERS

In the event of a panel or section of panels being damaged, these can be simply identified and lifted, replaced with new SurePave panels and re-filled. The race is now back in full operation.

Please note that the information above is given as a guide only. Suretech Industries cannot be liable for damage caused by incorrect installation of this product. It is the sole responsibility of the user to determine the suitability of any information or material for the intended use and the manner of its use and the user must assume all risk and responsibility in connection therewith.

Contact us for a **FREE** consultation or quote

0800 787 383 www.suretech.co.nz

707 Orchard Rd, Hastings • PO Box 2360, Hastings 4153 • New Zealand



1+2 Create a clean, solid base with adequate falls



3. Compact well and spread a thin layer of "bedding material"



4. Start laying SurePave Panels from left to right ensuring they interlock together correctly



Panels can be cut to conform to shape using a handsaw or circular saw



5+6. Fill SurePave with desired filling material to 20-30mm above top of panels and compact well

7. SurePave is ready for immediate use